

# ASAP V



## Multi-Threat Detection System

### Distributed CBRN monitoring for urban infrastructure

#### Features and Options

- NBC threat detection
- Explosives detection
- Smoke and fire detection
- Video and sound monitoring
- Intrusion detection
- Thermal imaging
- Meteorological data
- X-ray detection
- Large area air circulation and sampling methods
- Biological and radiological sample collection and storage

#### Application Areas

- Subways
- Airports
- Government buildings
- National security

**Urban infrastructures** worldwide are coming under increasing threat from vandals, gangs, and terrorists. The **ASAP V Multi-Threat Detection System** is designed to monitor such areas - subways, airports, and other high-value / high-risk areas – for multiple threats. ASAP V systems are modular and may be configured to uniquely match each customer's particular concerns and budget.

Each system operates as a discrete multi-tasking network node. Each node consists of a suite of detectors and samplers connected via an embedded PC: This local computer supports monitoring, local decision making, and communications. Information from each such node can be viewed locally or transferred to a remote PC-based monitoring station via secure optical fiber, cell phone, internet, Bluetooth, or other appropriate data linking technology. Sensors and sample collection devices may be physically located at the node or mounted remotely and connected to the node by cable or wireless link.


A wide range of primary/subordinate connection options and programmed sampling and analysis protocols are provided. For example, an optical device is available that




will detect unusual changes in biological aerosol levels. In response to a sudden increase, the system can be programmed to not only provide a visual and/or acoustic alarm, but also to turn on an aerosol sampler that collects particulates into a small volume of water, and to then perform an automated wet bioassay and electronically report the assay results.

As a second example, a radiation detection module may sense an abnormally high radiation level. The system can be programmed to issue a warning and to automatically run a radioactive aerosol collection protocol using a high-efficiency dry filter system.

A Windows® user interface provides operators with immediate visual feedback regarding the status of the individual sensors. By a button click, the user can examine each detector's output over the past 24 hours. Through pull-down windows, each detector's performance can be examined or adjusted as appropriate for immediate conditions. Permanent records of sensor data are stored for archival study.

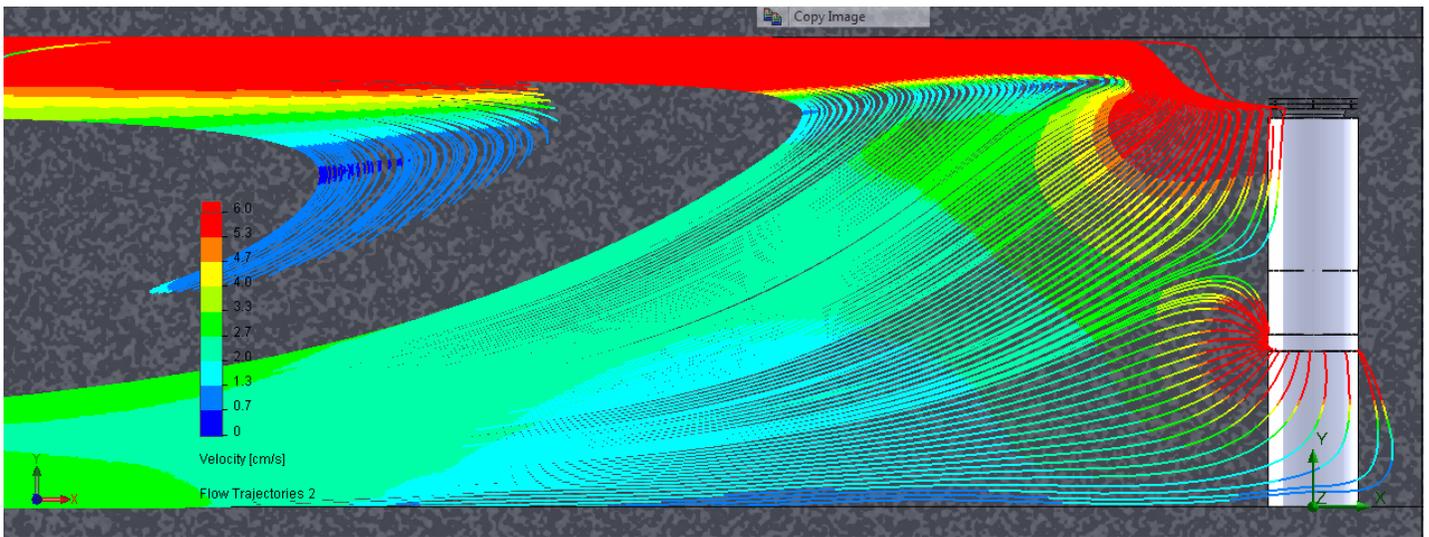

3D fluid dynamic modeling has been used to optimize external air sampling.

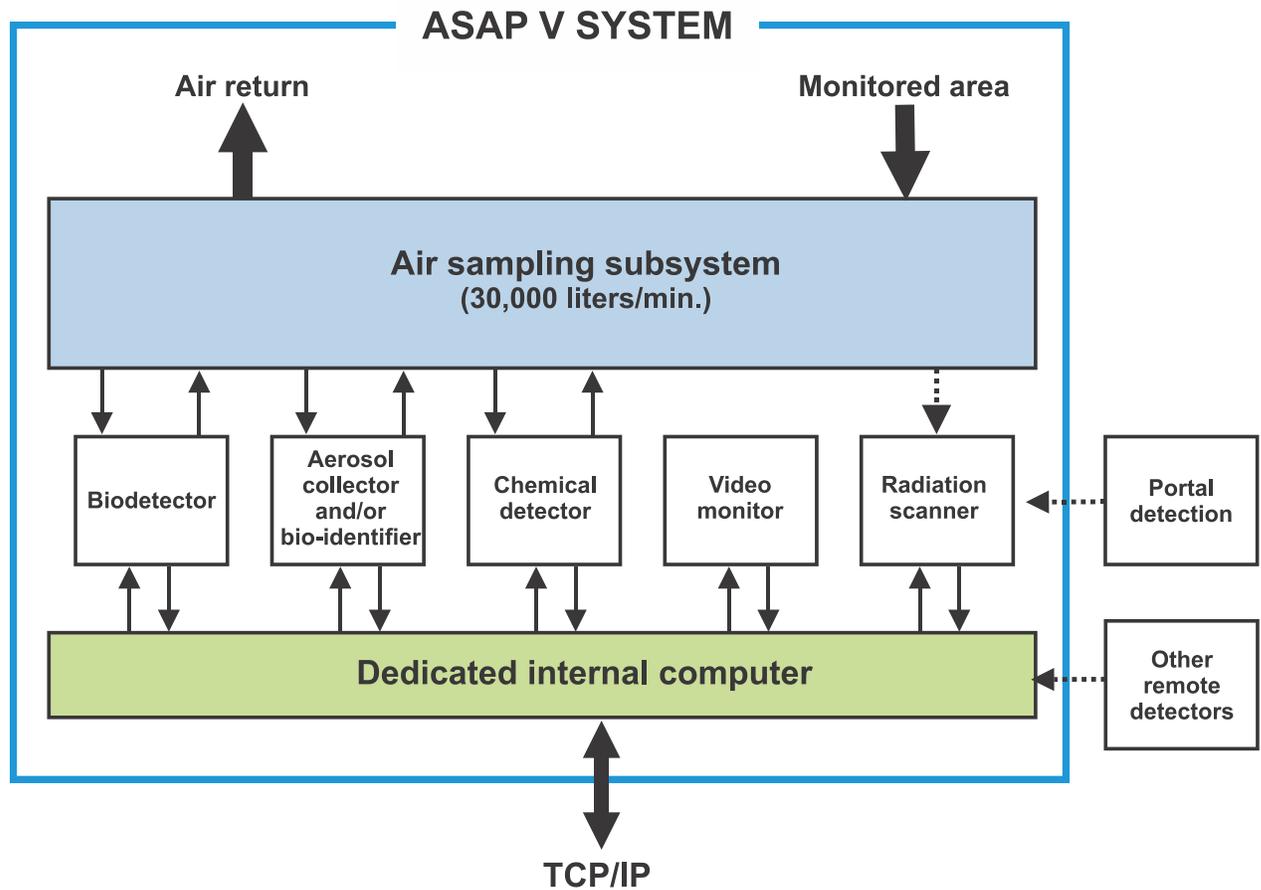

ASAP V multi-threat monitoring concept.

## BIOLOGICAL AGENTS

Upon detection of suspicious levels of biological aerosols, airborne biological agents are first collected into a small amount of water or onto a high efficiency filter, and then analyzed using wet immuno-assay methods. Both manual test strip and fully automated wet assay methods are available. For higher sensitivity, an aerosol pre-concentrator is also available. Testing is only performed when a threat is detected, greatly reducing the cost of consumables as compared to other wet bioassay strategies.

## CHEMICAL AGENTS

Airborne chemical agents can be detected at each node using either ion mobility spectrometer or infrared absorption spectrometer methods. The infrared method allows gases to be detected over a distance of up to 300 meters. Either approach offers fast and reliable detection of a wide range of airborne toxic industrial chemicals and chemical warfare agents with response times of only a few seconds.

## NUCLEAR MATERIALS

Two modules are available based on gamma ray scintillator products. One module is amenable to portal monitoring situations where the presence of radioisotopes and special nuclear materials are of concern at an entry point to a controlled area. The second module is more suited to area monitoring.

## METEOROLOGICAL

Sensors can be provided for wind speed and direction, relative humidity, temperature, pressure, visibility, precipitation, and GPS location.

## EXPLOSIVES

The presence of unusual levels of explosive vapors and particulates is determined using a module based on ITMS technology. Analysis and reporting times are under 10 seconds.

## INTRUSION DETECTION

Several intrusion detection technologies are available, based on detection methods ranging from microwave to acoustic to video.

## THERMAL IMAGING

Body temperature imaging (8 to 14 microns, typ.) is an excellent method for performing covert surveillance or fire detection, among other functions. Advancements in thermal camera technologies have now made this cost-effective to incorporate into the ASAP V. Thermal imagers can be installed with arrays ranging up to 640 x 480 (VGA) in size.



*ASAP V system installed in a bus station in Kazan*



*Infrared absorption spectroscopy-based toxic gas detector. Uses no consumables.*

## Specifications for ASAP V Multi-Threat Detection System

<b>Use profile</b>	Automated/programmed/continuous identification of targeted toxins, viruses, bacteria, spores, industrial chemicals, unusually high levels of explosives, and nuclear materials.
<b>Duty cycle</b>	Continuous. Functional availability >99.3%. <sup>(1)</sup>
<b>Air sampling rate</b>	30,000 liters/minute.
<b>Toxic Industrial Chemicals Subsystem</b>	Ion mobility spectrometry or long baseline infrared spectrometry. Gas libraries of 15 to 40 targets, depending on technology used. Analysis time less than 10 seconds.
<b>Explosives Subsystem</b>	Ion trap mobility spectrometer; analysis time = 8 seconds.
<b>Nuclear materials Subsystem</b>	Area and portal styles available. Typical specifications: 0.05 to 3.0 MeV gamma detection window. Detects 360 kBq of Cs-137 and 6 gm Pu <sup>(2)</sup> ; neutron detection optional.
<b>Video subsystem</b>	Up to 1280 x 720 (HDTV) resolution +sound.
<b>Thermal video subsystem</b>	Up to 640 x 480 (VGA) + sound.
<b>Bioidentification-Manual</b>	Immunoassay test strips and machine reader: 12 minutes typical overall time.
<b>Bioidentification-Automated</b>	Four simultaneous assays performed on 1 cc samples using a credit card-size assay coupon. Coupon and associated re-useable reagents provide from 20 to 30 assays over a 48 hour use period. 15 to 30 minute combined collection and identification period.
<b>X-ray subsystem</b>	Detect 38 gauge wire guaranteed; penetrate 37mm of steel; 4096 gray scale.
<b>User Interface</b>	Windows® user interface. The coordination and interaction of sensors, samplers and analyzers may be set by the user through built-in software recipes.
<b>Data storage/ programmability</b>	Raw/processed data storage at each monitoring node. Operating protocols are re-programmable through an external communications link.
<b>External communication</b>	Ethernet based communication to remote locations worldwide. Wireless options also available.
<b>Consumables</b>	None, if wet bioassay identification is not used.
<b>Physical Size</b>	Depends on user requirements. Architectural column-style design is typically 0.9 meters diameter x 3 to 4 meters high.
<b>Operating temperature range</b>	For systems that do not support liquid-based bioassays, -20° to 60° C; for liquid-based bioassay systems, above freezing to 50° C.
<b>Power consumption</b>	750 watts typical with 30,000 LPM air circulation system installed.
<b>Humidity</b>	5% to 95%, non-condensing.

### NOTES:

1. Functional availability is the percentage of total work time the system is functional, averaged over a 90 calendar day period.
2. Search volume: 0.7m diameter X 2m length. Object speed 5 km/hr. Detection probability 50% at 95% confidence level, 0.17 false alarm rate, 20 ur/hr background.

*Research International, Inc. reserves the right to change product and system specifications without prior notice.*



### U.S. Headquarters Office

Research International, Inc.  
17161 Beaton Rd. S.E.  
Monroe, WA 98272-1034 USA

Tel: 1.800.927.7831  
info@resrchintl.com  
www.resrchintl.com

### U.S. East Coast Office

Mr. Jon Tobelmann  
1.703.625.8381  
jontobelmann@resrchintl.com

### International Offices

Please contact the U.S.  
Headquarters office to locate a  
representative in your region.